


## Right side

Cockpit Colour: Aircraft Grey-Green BS283 (FS 34226)

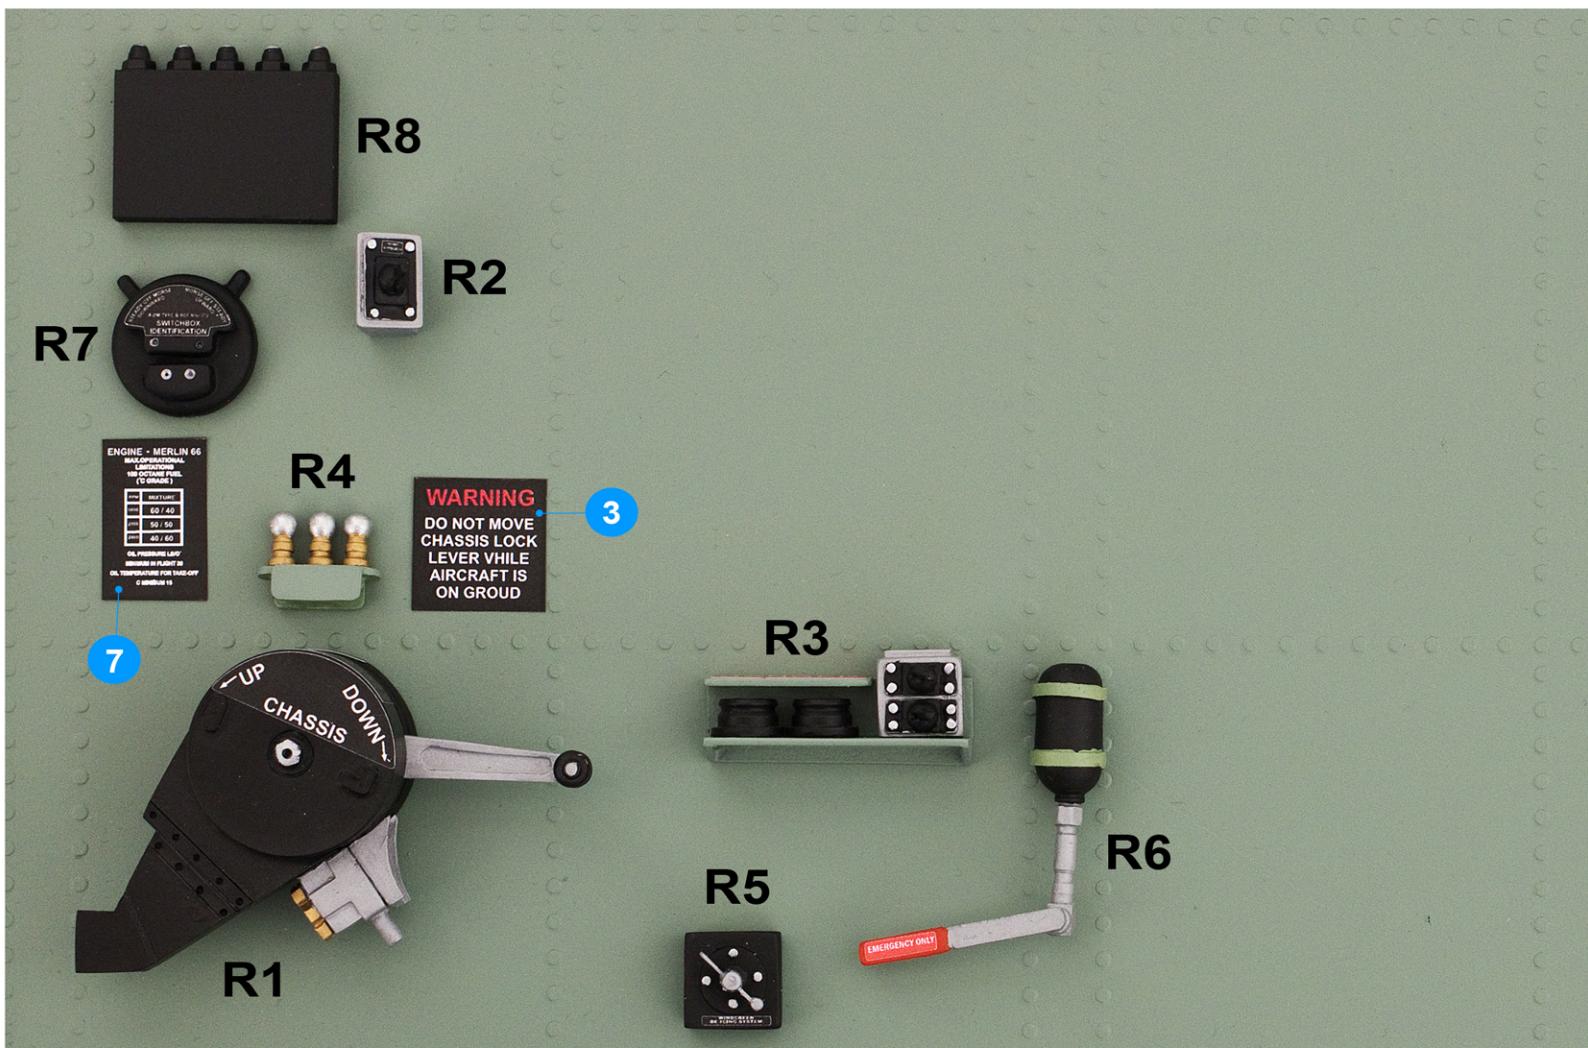


self-adhesive tape

### Instruction :

It is recommended to attach the parts by a double-sides adhesive tape to the internal structure, whereas the tape provides a resilient gripping and, moreover, enables a repeated take-out of a part. To complete the internal cockpit space, addition of electrical cables and liquid distribution pipes is also suitable.

**NOTICE : The panel base material is not a part of the construction kit**

## Left side

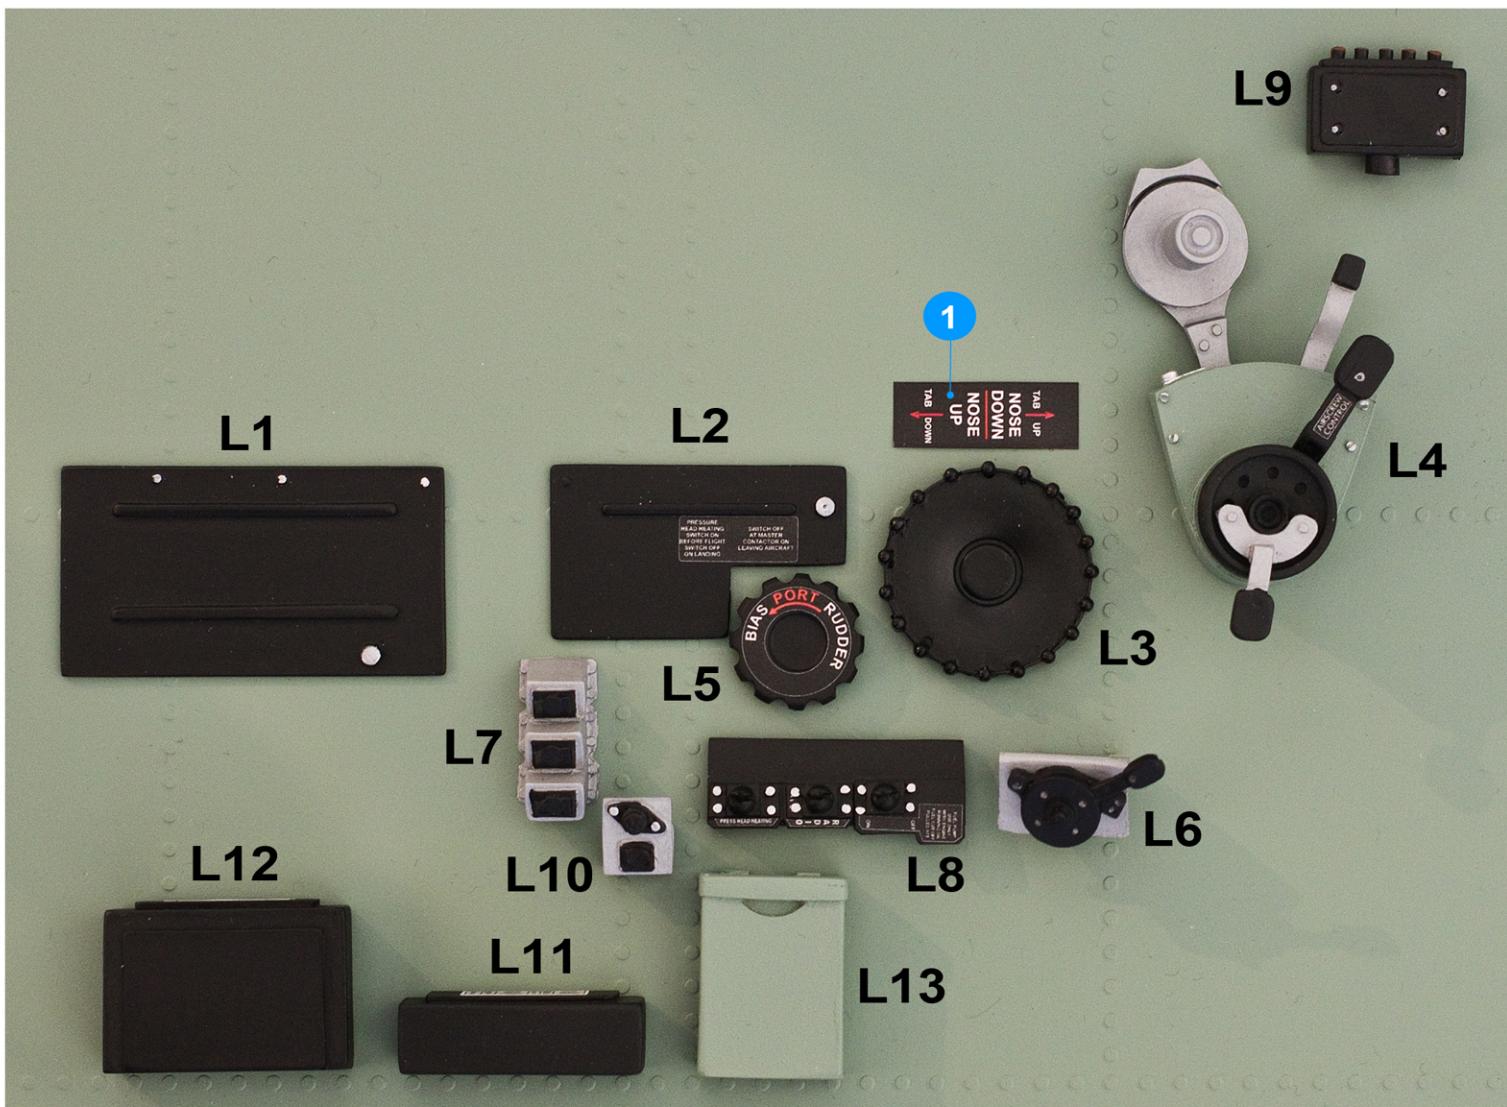

self-adhesive tape

### Instruction :

It is recommended to attach the parts by a double-sides adhesive tape to the internal structure, whereas the tape provides a resilient gripping and, moreover, enables a repeated take-out of a part. To complete the internal cockpit space, addition of electrical cables and liquid distribution pipes is also suitable.

**NOTICE : The panel base material is not a part of the construction kit**